



HCS-3600AHR SERIES DESCRIPTION

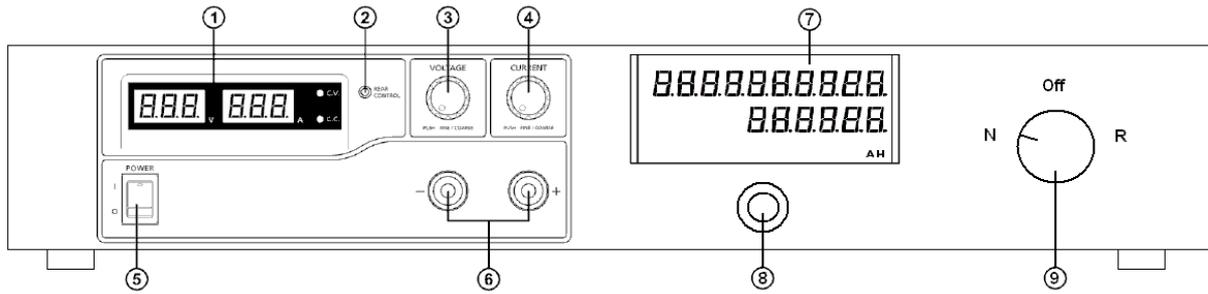

FRONT

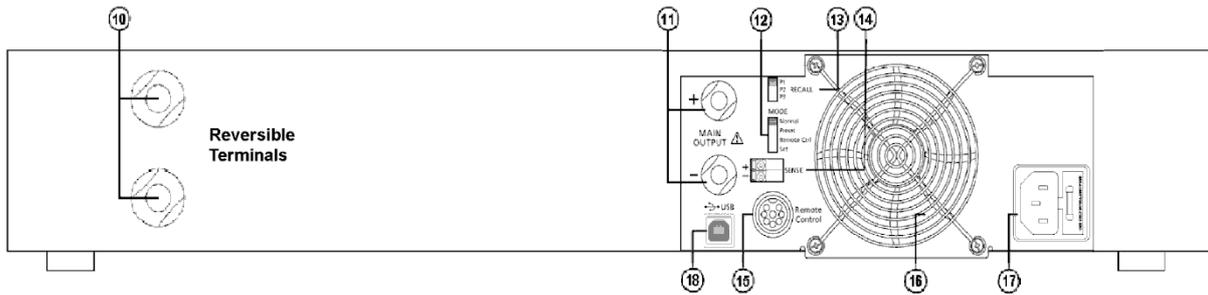

REAR

- (1) LED panel meter display with CC/CV indication
- (2) Rear Control indicator (front panel V and I controls are disabled)
- (3) Output Voltage Control Knob (press for fine/course control)
- (4) Output Current Control Knob (press for fine/course control)
- (5) Power ON/OFF Switch
- (6) Auxiliary output terminals (max 5A)
- (7) Amp Hour Meter (0...999999.9999AH), Amp Meter (0...9999.99A)
- (8) Amp Hour Meter Reset Pushbutton
- (9) Normal–Off–Reverse (N–O–R) rotary control (a beeper sounds when set to Reverse)
- (10) Reversible Terminals (controlled by the N–O–R switch)
- (11) Main Output Terminals
- (12) Mode Selection Switch (Normal, Preset, Remote Control, Set Modes)
- (13) Recall or Preset Selection Switch (P1, P2, P3)
- (14) Remote Sensing Terminals (HCS3600AHR only)
- (15) Remote Control socket
- (16) Air Exhaust Fan and Outlet
- (17) AC Input Socket and Fuse
- (18) USB port for remote computer control and data logging. Units without USB may have a RJ11 telephone jack installed reserved for calibration purposes.

This series has three models; please ensure that you have purchased the correct one...

Model Number	Output Voltage Range	Output Current Range
HCS-3600AHR	1 ~ 16V	0 ~ 60A
HCS-3602AHR	1 ~ 32V	0 ~ 30A
HCS-3604AHR	1 ~ 60V	0 ~ 16A